


Pro Capsule Casing Error

Needle error occurs when the needle case is out of position or when the needle bar is down for some reason and did not move back to the upper position.

if that is the case:

Check if there is a Needle #

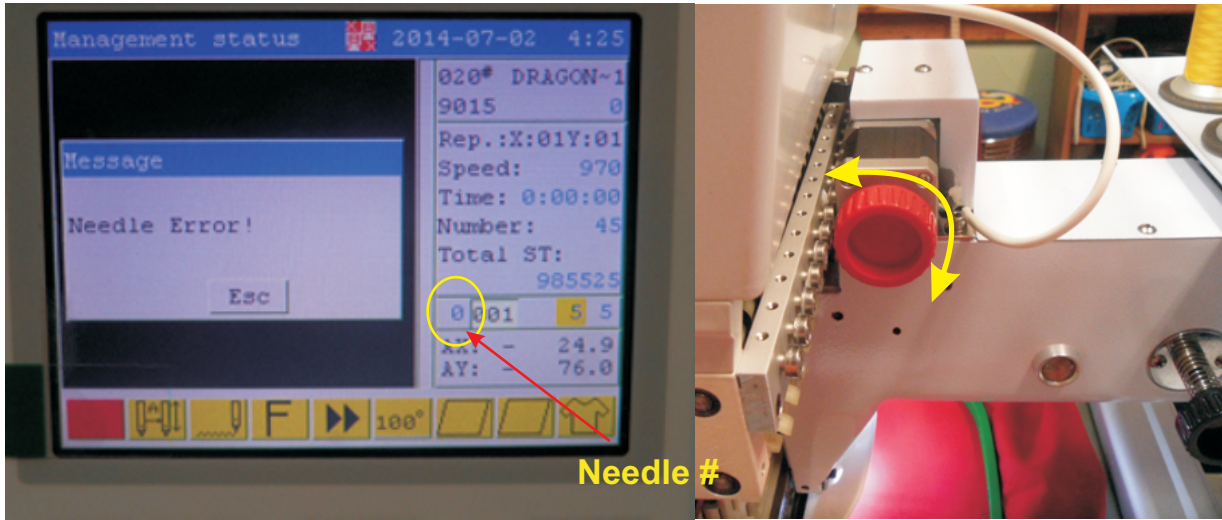

If there is not a Needle # turn the red knob slow until a number appears on the screen otherwise press **MORG**.

MORG to reset the shaft position



Select 100° Degree to reset the needle position again

