

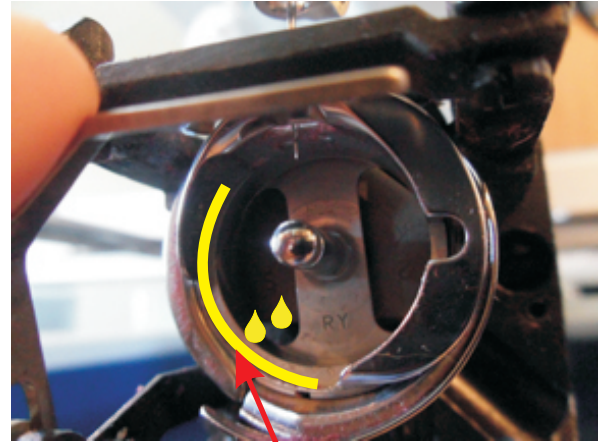
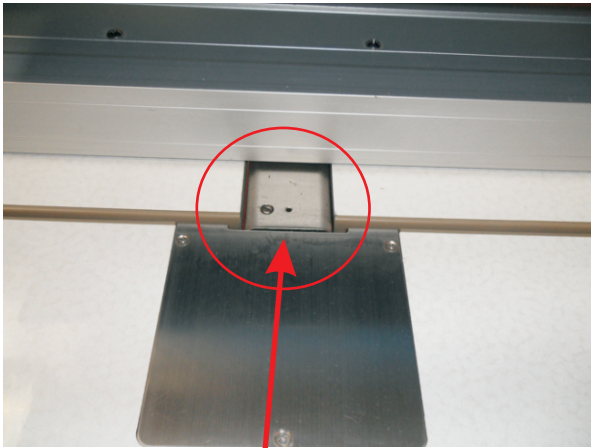
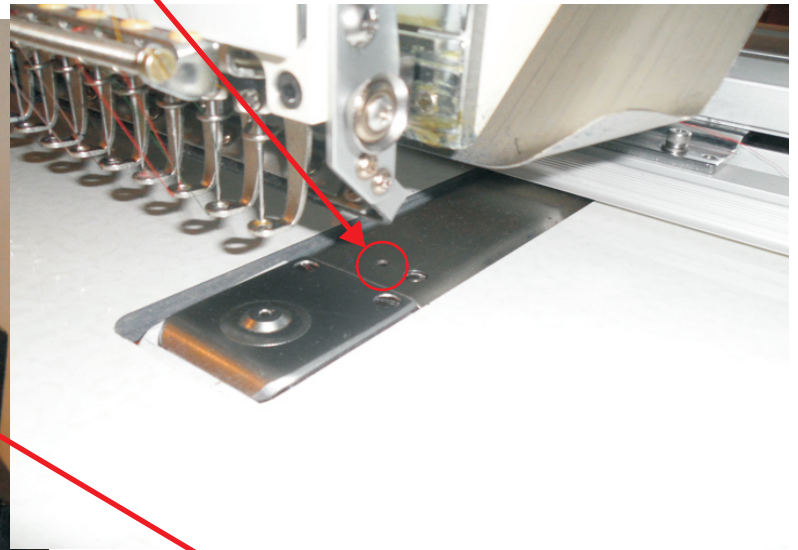


# PRO SHUTTLE OILING POINTS

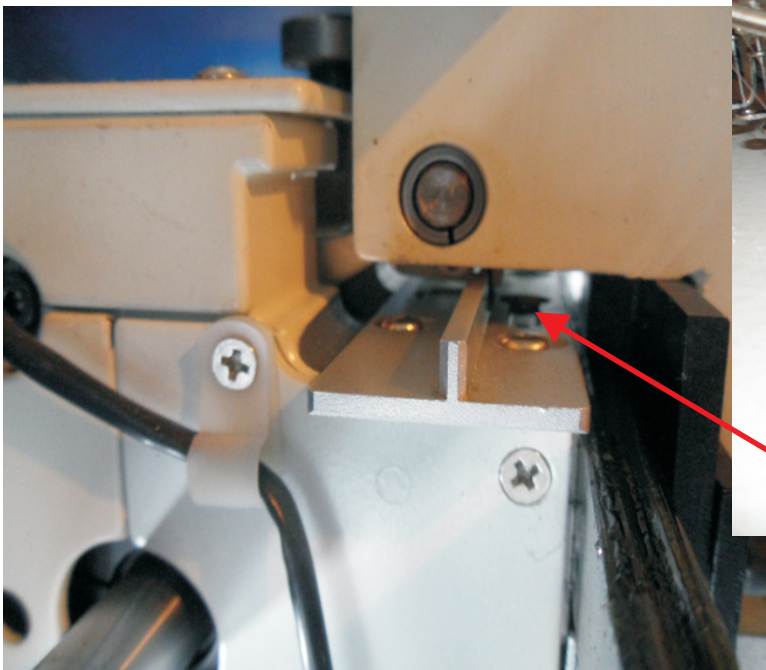


Oil gently every 4 hours of operation


Rotary hook every  
3 to 4 hours

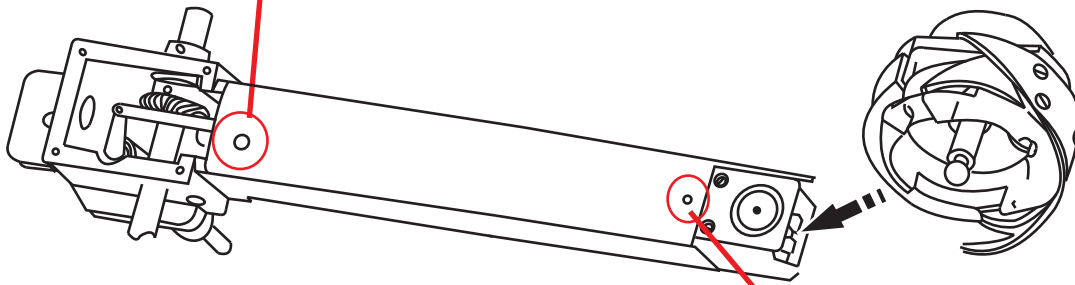


Needle Bar reciprocator  
Every 4 hours of operation

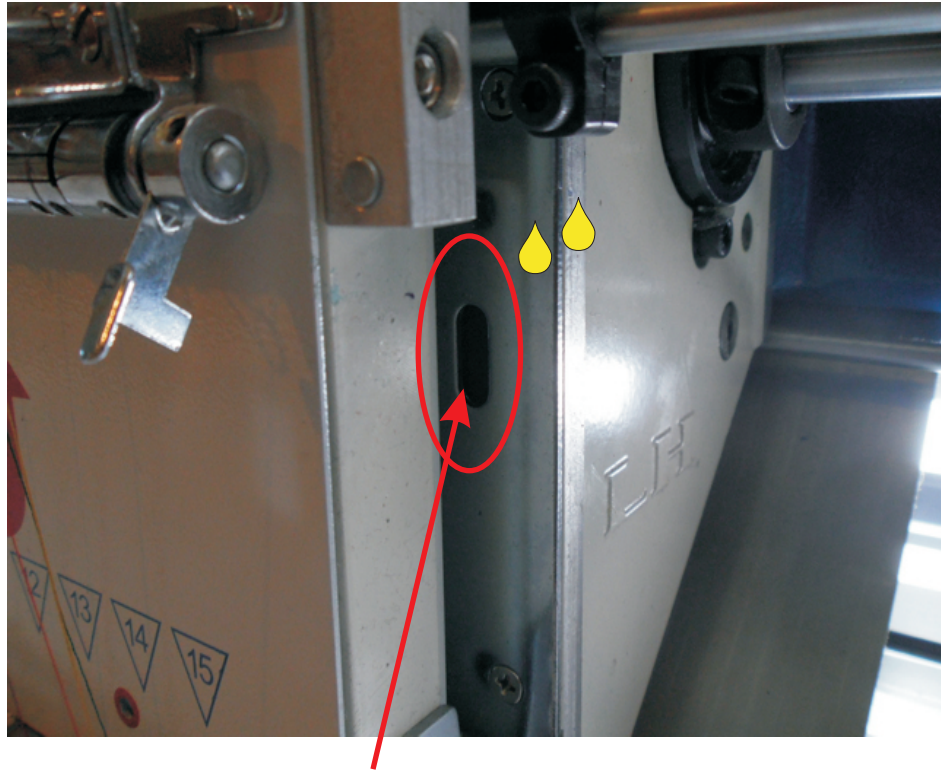


Presser bar every 4 hours of operation

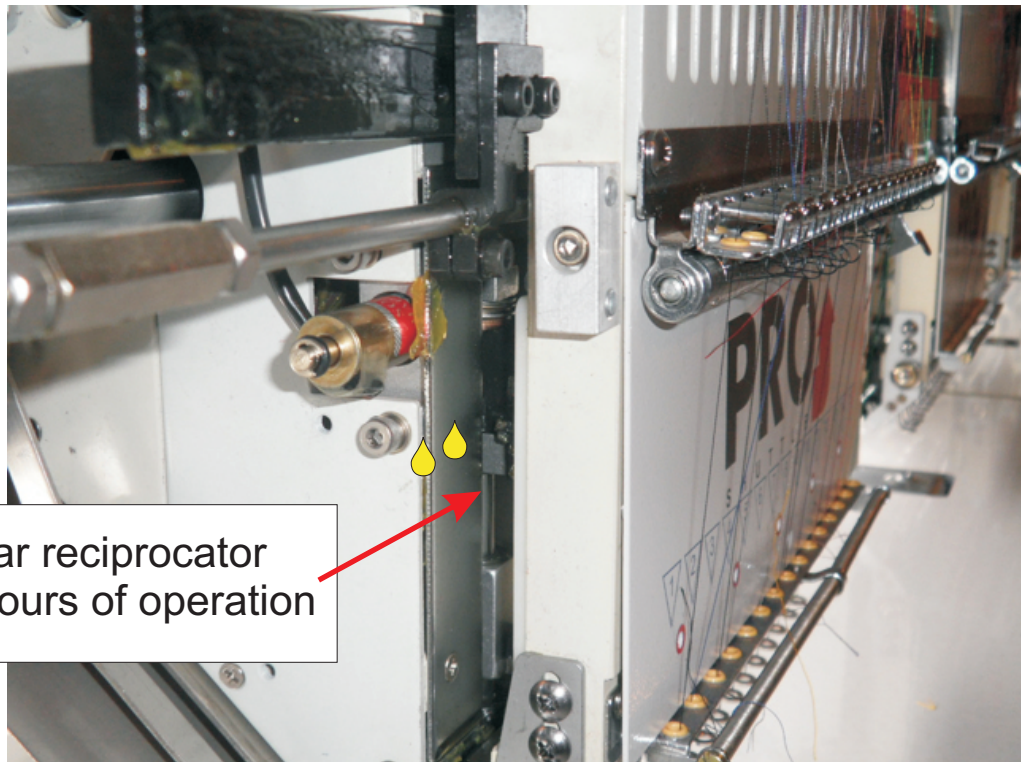

Needle bar reciprocator every 4 hours of operation

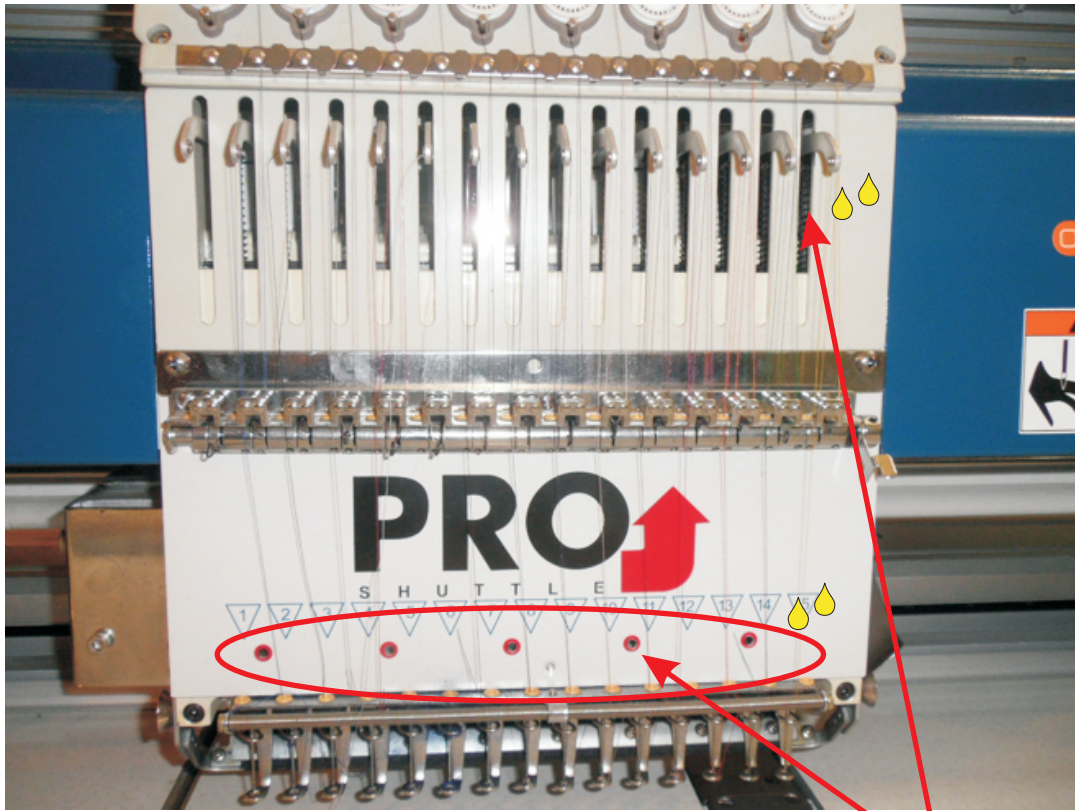


Oil once a week  
bottom holes and top springs

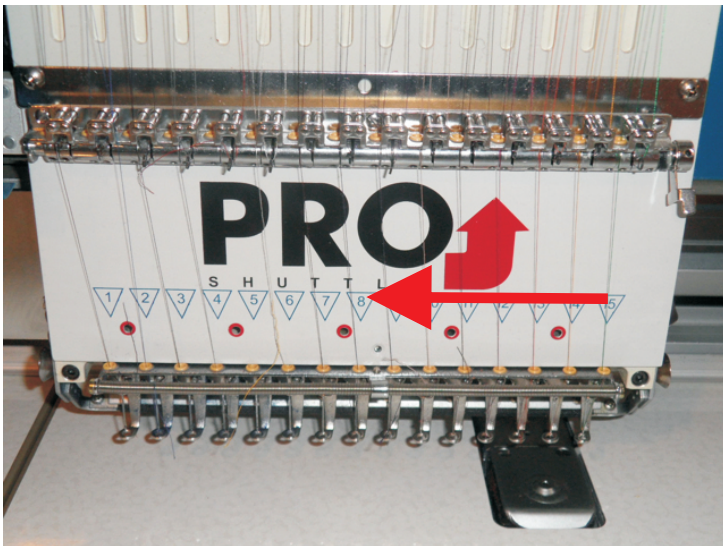


### Note


If splashing oil on top of garments, the felts may be damp with too much oil. Stop oiling felts until next oil schedule or slide the cover and dry the felts a little to avoid splashing.

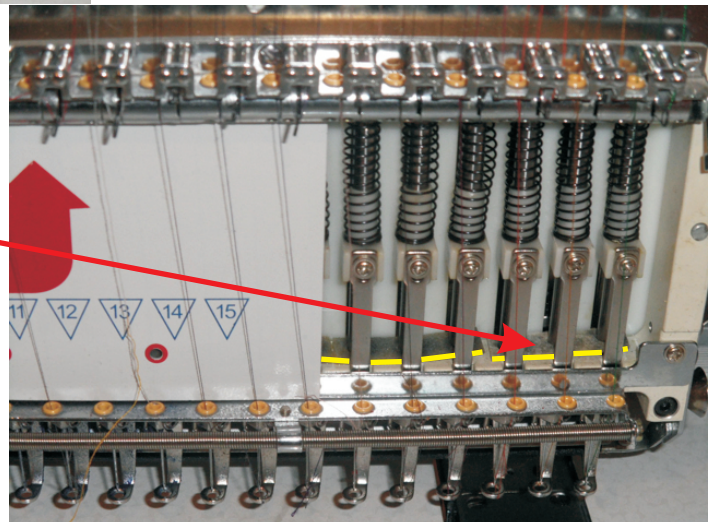

# PRO SHUTTLE GREASE POINTS

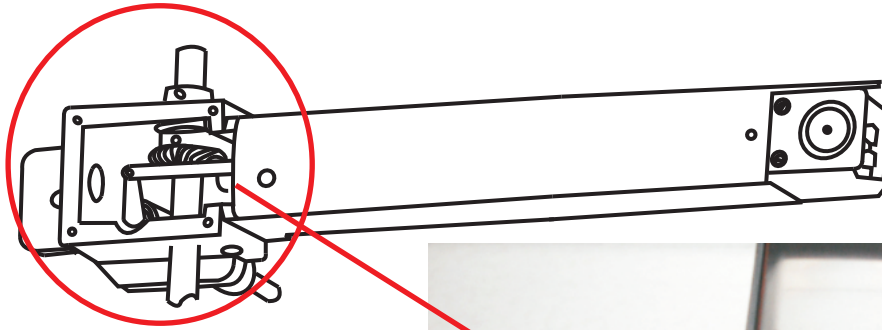

Grease cam ever 3 week  
or as need it

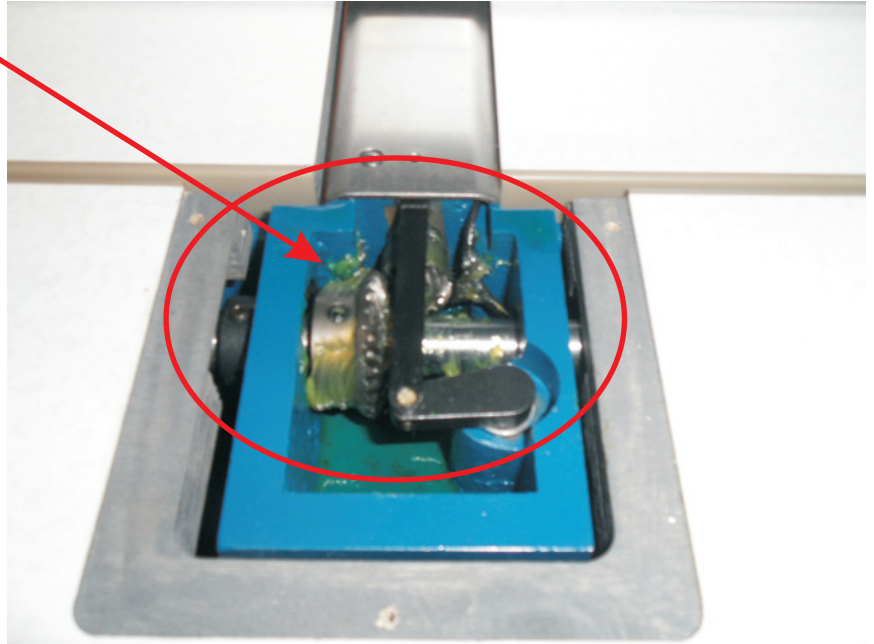

## **WARNING**

If you take the screws out on cover, be careful not to drop them  
inside the cam area will be hard to reach them.

Grease every 3 weeks  
or as need it

**OR**

May take the cover off to Grease  
Cam as well

