



Pro Shuttle Catcher adjustment

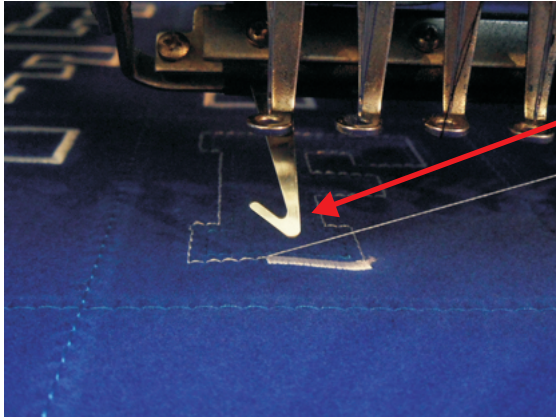

Make sure that the hook is not bend and moves down far enough to catch the string.

If that is not the case adjust the hook (Fig# 2)

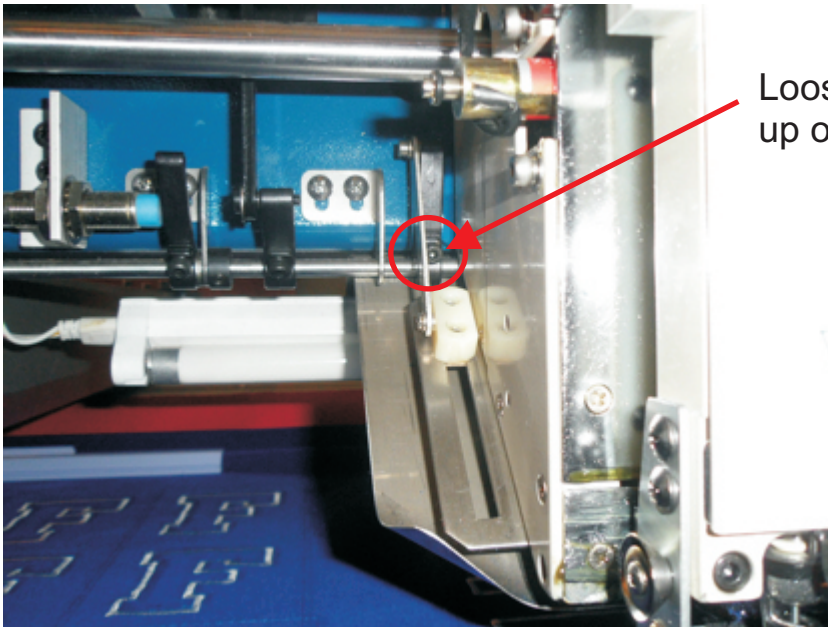

Loosen the screw and move the hook up or down

(fig #2)

Warning:

Moving the hook catcher to much up or down may have a loud sound when machine trims if that the case adjust the catcher again.