


## WINDING THE UNDER THREAD BOBBIN

1. Set a bobbin (2) on the thread winding shaft (1).
2. Place the spool (3) on the spool stand on the cover, pass the thread end through the thread tension regulator guide (4) and wind the thread round the bobbin (2).
3. Press the thread winder lever (5) to the right so that it touches the inner face of the bobbin (2).
4. Thread is wound on the bobbin as the machine operates and the lever automatically returns back (turning to the left) when a certain amount of thread is wound on the bobbin to stop winding of the under thread.

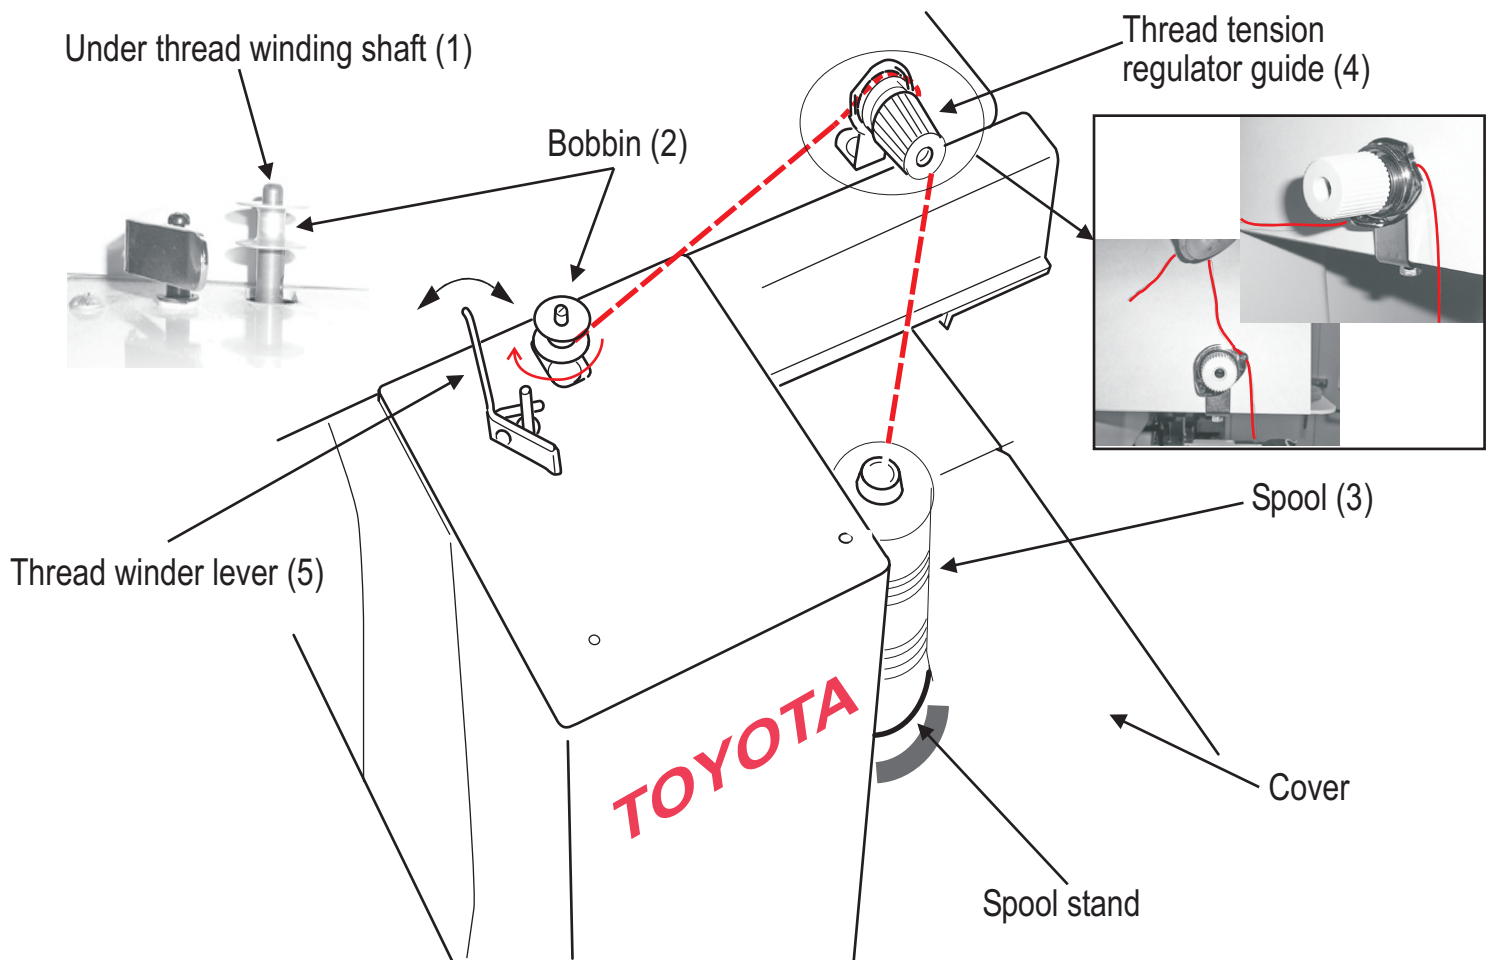

Under thread bobbin winder may be used up during embroidery. In this case, set the the under thread in the same manner as explained above.