



6. Panel CPU circuit board cover

- (1) Loosen the 4 set screws (j), and remove the panel CPU circuit board cover.

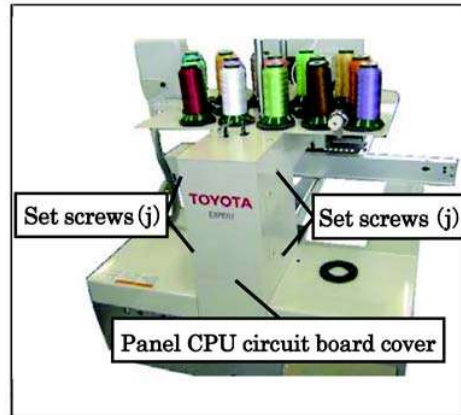


7. Take-up lever cover

- (1) Open the face cover.
- (2) Remove the 2 set screws (k), and remove the take-up lever cover.

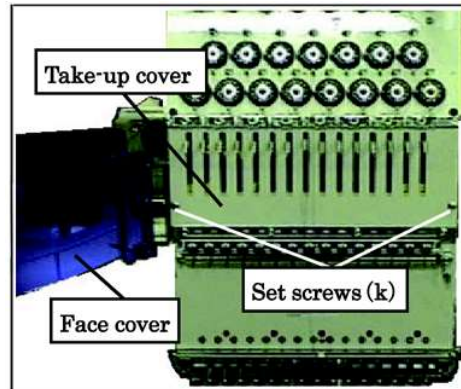

8. Lower cover

- (1) Open the face cover.
- (2) Remove the set screw (l), and remove the lower cover.

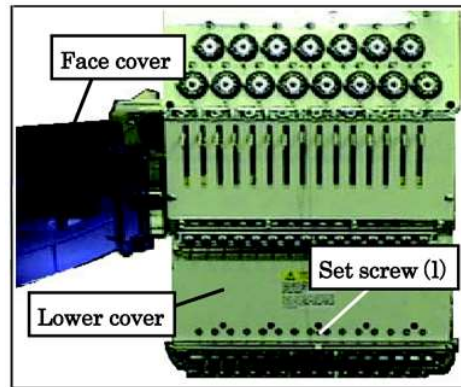

9. Color change cover

- (1) Remove the 2 set screws (m), and remove the color change cover.

