



Pro Capsule Hook Timing

1. Loosen 3 set screws at the Rotary Hook.
2. Turn to machine down to lower dead point and keep rotating Hand wheel until the degree window show 195° or on sree shows 195° as shown.

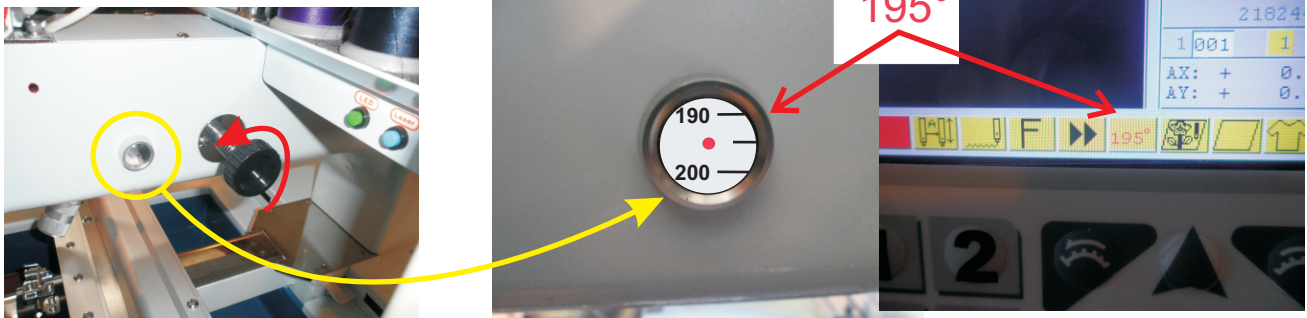


4. Slightly tighten one screw the one on the flat par (not 3 screws) on the Hook carefully by small screw driver as shown.

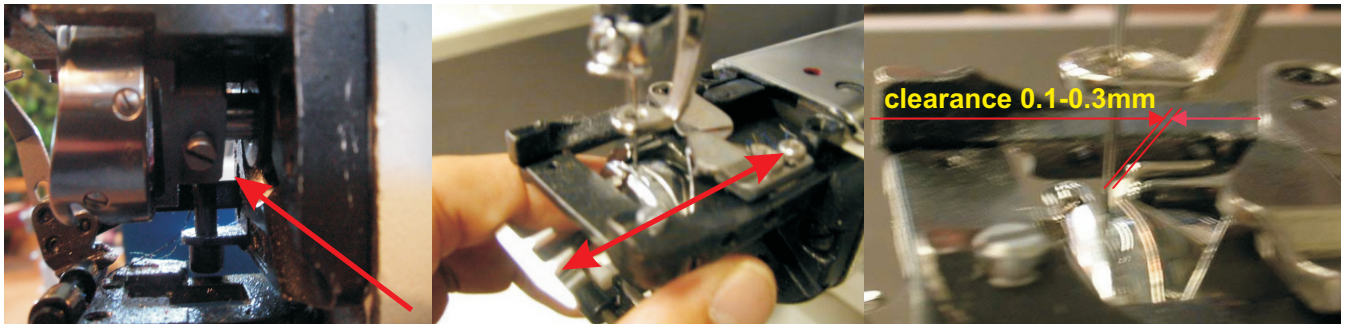

5. Adjust Hook front to back (clearance between Needle to Hook tip 0.1mm to 0.3mm)
Also adjust Hook right to left (Hook tip must be behind the center of the Needle)

This is key point set screw slightly tighten, it's means Hook is movable front and back and rotary direction.

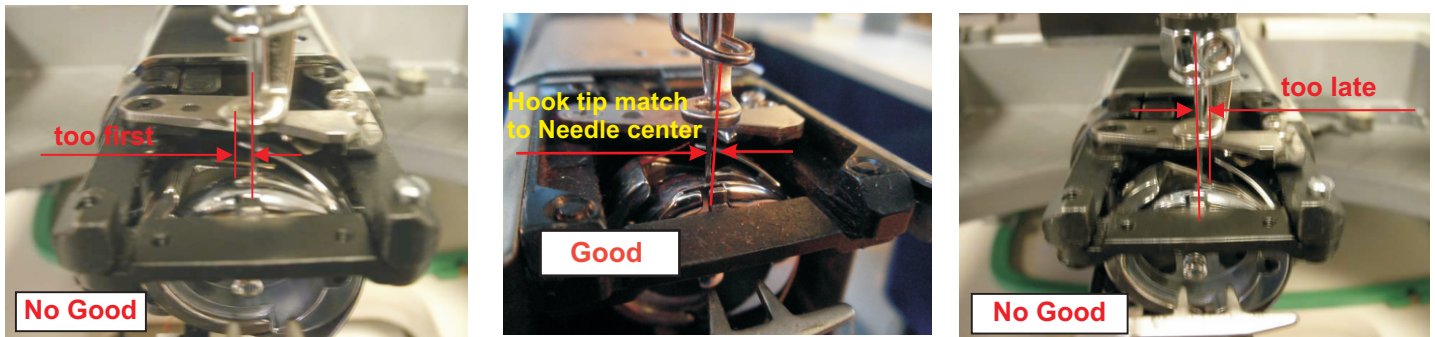

6. Then tighten 3 screw firmly use a good screw driver to avoid damage the screw head.

